

# GUARDSAFE® BARRIER FENCE TOPPER INSTALLATION



208 Chestnut Street  
Reading, Pa 19602  
(610)376-2666  
[www.remcon.com](http://www.remcon.com)

# GUARDSAFE® BARRIER FENCE TOPPER INSTALLATION




## Fence Topper Materials

- 69.5" x 48" Fence Panels (1 For Each Barrier)
- 1 5/8" Posts (2 For The First Panel, Then 1 For Each Additional Panel)
- Saddle Clamps (4 for Each Panel)
- 1 1/2" Carriage Bolts (1 For Each Saddle Clamp)
- 9/16" Nut (1 For Each Saddle Clamp)

## Supplies Needed


- Impact Driver
- 1/2" Deep Socket
- Tape Measure
- Marker

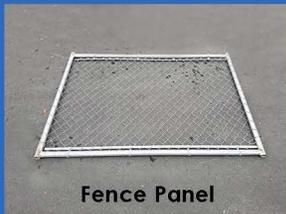

Fence Panel



Post

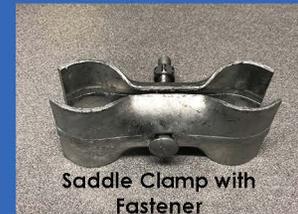

Saddle Clamp with  
Fastener

## Before Beginning

Line up the barriers in desired configuration, so that the end pieces fit together as shown to the right. Note that repositioning of barriers will not be possible after clamps are tightened.

## Installing The First Topper

**Step 1-** Using a tape measure and a marker, measure 38" above the bottom of a post and make a mark. This is the height we recommend placing the panels.

**Step 2-** Repeat this process on another post.

### Using Clamps to Attach a Fence Panel to a Post

**Step 3-** Line up a fence panel with the mark drawn on a post.

**Step 4-** Insert a bolt through one half of a saddle clamp. Place the saddle clamp under the loose post and fence panel so both parts are resting in the saddle clamp cradles. The clamp should be positioned just above the bottom runner of the panel.

**Step 5-** To secure the clamp, place the other half of the clamp on the bolt, feeding it through the center hole.

**Step 6-** Place a nut on the end of the bolt. Using an impact driver with a 1/2" deep socket, tighten the nut to the clamp.

**Step 7-** To attach the upper half of the panel to the post, repeat this process, situating another clamp right below the top runner of the panel. This positioning can be seen in the photo to the right.



**Step 8- Attach the second post to the other side of the panel with two more clamps.**

**Step 9- With the help of another person, lift the panel attached to the two posts and place the unit on top of a barrier, easing it into the interlocking end pieces.**

## **Installing Additional Toppers**

**Repeat steps 1 and 2**

**Step 10- Using the steps above, attach the posts to a fence panel with two clamps. The fence panel should now look like a flag. (See section titled “Using Clamps to Attach a Fence Panel to a Post”)**

**Step 11- Lift the panel attached to the post and insert it into the interlocking end piece of the next consecutive barrier.**

**Step 12- Use two clamps to attach this panel to the post attached to the adjacent panel.**

**Step 13- Place one clamp right above the bottom clamp that is already attached to the post.**

**Step 14- Place the other clamp right below the top clamp that is already attached to the post.**

**Step 15- Repeat this process for each additional fence topper.**

